

Het fabrieksschema, dat u zoekt, staat op de volgende pagina.



 
 
 
 
 
Groothandel Nelec heeft voor alle tweedraads deurcommunicatie van BTicino zeer duidelijke Nederlandse schema's en gebruiksaanwijzingen gemaakt. U vindt alles op www.nelec.com.



Als u BTicino deurcommunicatie koopt bij Nelec, krijgt u voor ieder project een aansluitschema op maat, worden de buitenposten in elkaar gezet en zijn alle videofoons voorgeprogrammeerd. De monteur kan direct aan de slag en als hij een vraag heeft, krijgt hij bij Nelec iemand met verstand van zaken aan de lijn. Alle informatie staat duidelijk op www.nelec.com.



Klik op deze pagina voor meer informatie over dit product.



nelec

INTERCOM MADE EASY









The Bticino factory file you're looking for is on the next page.

Specialized wholesaler Nelec has made excellent manuals in Dutch for all BTicino two-wire intercom components. Get more information on this product by clicking this page.


wholesaler **Nelec BV**
 intercom made easy
www.nelec.com
 Gyroscopweg 106
 1042 AX Amsterdam
 Postbus 20674
 1001 NR Amsterdam

e-mail info@nelec.com

      
Telefoon 020-6 352 350
 Verkoop 020-6 352 351
 Administratie 020-6 352 352
 Techniek 020-6 352 353
 Offertes 020-6 352 357



1

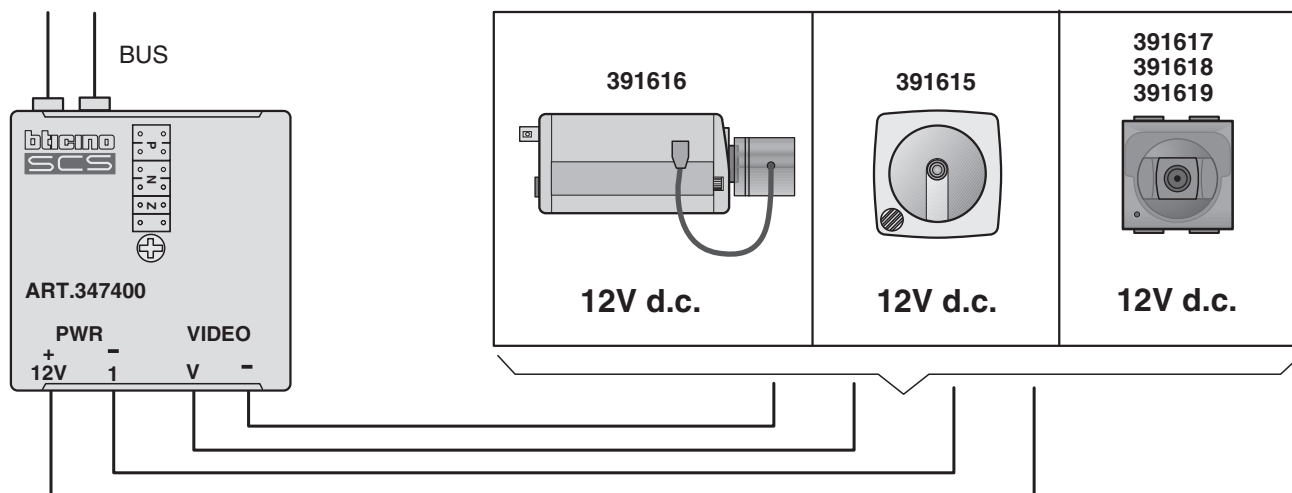

2

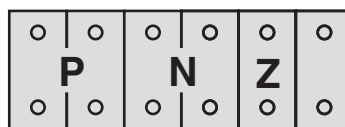

	P	N	Z
I	Indirizzo della telecamera	Indirizzo del posto interno chiamato in caso di allarme	Zona allarmata
GB	Camera address	Address of the internal unit called when there is an alarm	Alarmed zone
PL	Adres kamery	Adres aparatu wewnętrznego dla wywołania alarmowego	Strefa alarmowa

3

Per installazione considerare l'interfaccia come un posto esterno video.

For installation consider the interface as a video entrance panel.

Podczas instalacji interfejs należy traktować jak panel zewnętrzny

